




Quick Start Guide

For the latest in products, news, and support visit our web page at

www.datamax-oneil.com


1

Connect Power and Communications

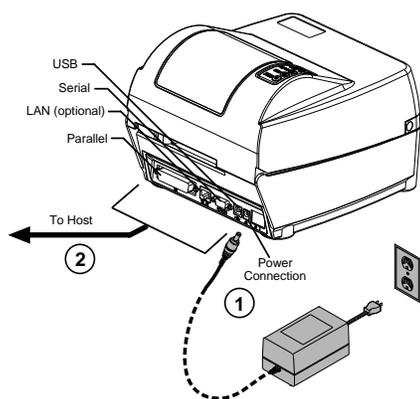


2

Adjust Media Sensor
(perform only if equipped with the optional AMS feature)

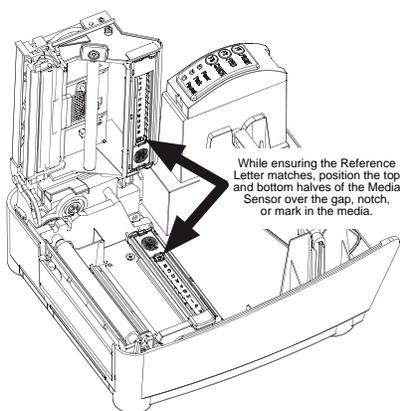

3


Load Media

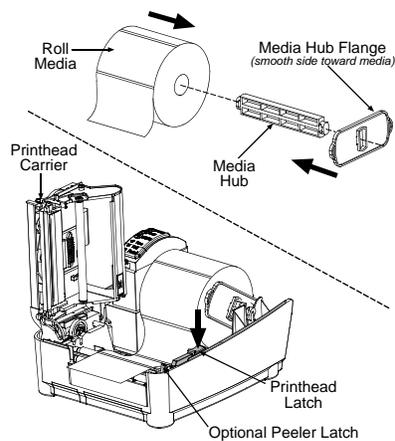


4

Load Ribbon
(perform only if equipped with the optional Thermal Transfer feature)


a) Push the Printhead Latch down and raise the Printhead Carrier Assembly.

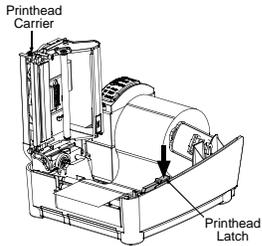

b) Remove and load the Hubs:

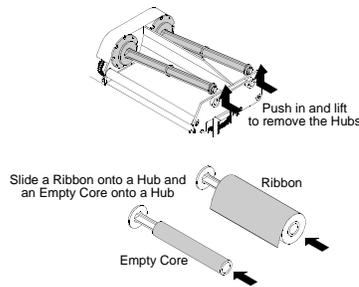


c) Replace the Hubs so that the ribbon flows as shown below:

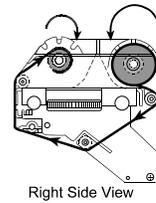


Note: Ensure the inked side of the ribbon faces the media and NOT the printhead.

d) Route the ribbon through the printer, as shown below:

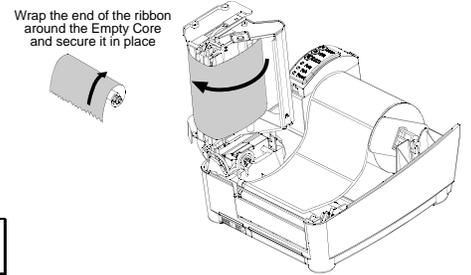

5

Printer/User Interface

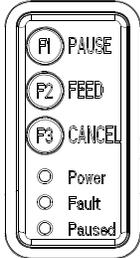

Normal Mode (Normal power-up)

- F1 Pauses/Un-pauses the printer.
- F2 Feeds one label and clears fault conditions.
To calibrate media: Press and hold the until one complete label has been output then release.
- F3 Cancels the current batch of labels.
Press the Pause button to print the next batch of labels (if any) in the print buffer.

○ Power Indicates the printer is on

○ Fault Indicates a top of form or mechanical error has occurred

○ Paused **Solid On:** Indicates the printer is in the 'Paused' state

Blinking: Indicates the printer is receiving data from the host

6

Printing Configuration and Test Labels



With the printer 'On' and loaded with 4 inch wide media (and ribbon, if needed):

To print the Configuration Label:
Press the \odot + \odot buttons simultaneously.

To print the Print Test Label:
Press the \odot + \odot buttons simultaneously.

To print the Ethernet/Network Report Label:
Press the \odot + \odot + \odot buttons simultaneously.

- Follow and perform the suggested maintenance as detailed in the *Operator's Manual*.
- For detailed information on the topics referred to in this guide consult the *Operator's Manual*; for detailed information on custom programming see the *Class Series II Programmer's Manual* (included on the Accessories CD-Rom).

Contacting Datamax-O'Neil...

Corporate Headquarters (407) 578-8007
 Technical Support (407) 523-5540
 Website: www.datamax-oneil.com